
Craft Hut Canopy 10' x 10'

Assembly Instructions



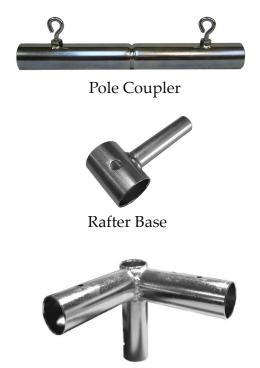

Corner Joint

Parts List:

- (1) Craft Hut Top with Skylight and front and rear Vents
- (3) 10' x 7' Sidewalls
- (1) 10' x 7' Door Wall
- (2) End Rail Male section
- (2) End Rail Female section
- (2) Side Rail with snap buttons- Male section
- (2) Side Rail with snap buttons Female section
- (2) 3/4" diam. pole sections
- (4) Upper Leg section 46 3/8" long
- (4) Lower Leg section -453/4'' long

- (8) Curved Rafters
- (2) Center Center Rafters
- (2) Center End Rafters with rings
- (2) PVC Riser Poles
- (20) Lock Pins
- (4) Corner Joints
- (4) Rafter Bases
- (4) Upper Leg Fittings
- (1) Pole Coupler
- (4) Feet
- (6) Thumbscrews
- (8) Ball Bungees

- **1.** Assemble pole sections using lock pins to secure:
 - * Side rail sections connect to form 2 poles that measure 10" long.
 - * End rail sections connect to form 2 poles that measure 10" long.
 - * Upper Leg section slides over Lower Leg section.

Upper Leg Fittings snap onto top end of legs. The photo below demonstrates the attachment of the leg to the corner joint; **do not** attach to corner joint until roof frame is fully assembled.



Leg parts with Corner Joint

Upper Leg Fitting attached to Leg


Leg assembly shown with Corner Joint

- 2. Slide Rafter Bases onto Side Rails, securing in place with snap buttons.
- 3. Attach Side and End Rails to Corner Joints to form the roof frame. Secure all joints with lock pins.

Rafter Base	End Rail
and the second se	
	Side Rail
3-Way	
	and the second

4. Slide Curved Rafters onto the Rafter Bases on the Side Rails, including at the corners.

5. Use Center Center Rafters to connect the two arches in the middle. Use Center End Rafters (with spreader bar stops) to connect the arches at the gable ends of the roof.

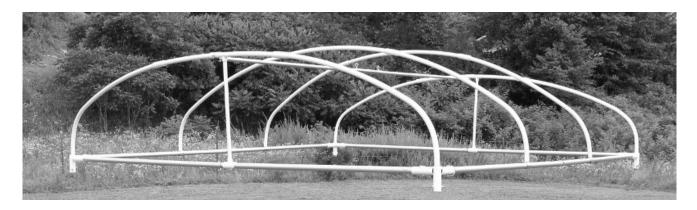

6. Install PVC Risers at gable ends.

7. Assemble Spreader bar by sliding smooth ends of ³/₄" poles into Pole Coupler and tightening thumbscrews. Install between Risers.


8. Lift front edge of roof frame and insert front legs into corner joints, securing with lock pins.

9. Repeat with rear legs.



Roof and Walls

- **1**. Unroll roof in the direction of the spreader bar, letting ends hang over.
- **2.** Unfold roof to the sides, adjusting placement to cover roof frame.
- **3.** Attach Velcro straps at corners.

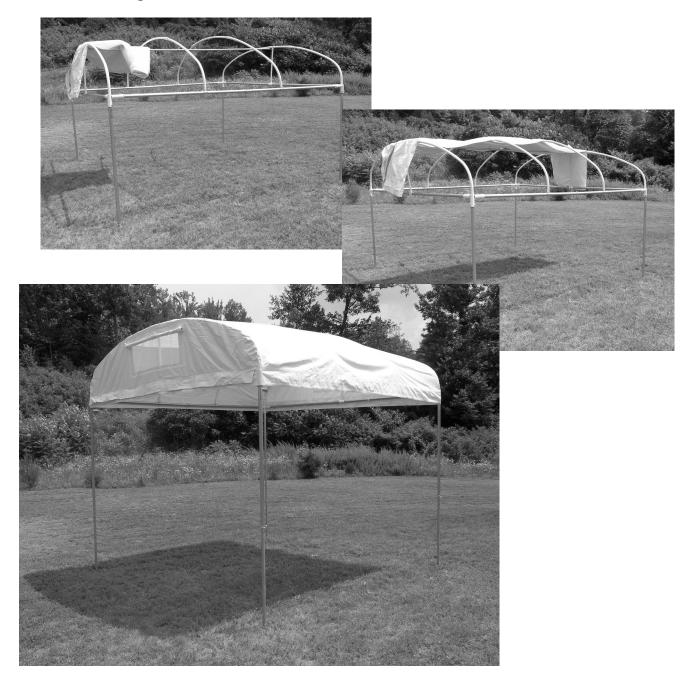

5. Step underneath roof and attach Velcro straps to Side and End Rails, then reach up and attach Velcro straps to Rafter arches.

6. Extend legs to full height and zip walls on to complete set up.