


Wheeled Zig-Zag MeshPanel Frame Instructions

MeshPanels:

(3) Mesh Panels

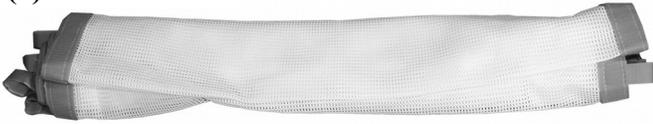

Poles:

(4) Female Poles with WheelSet assembly



(6) Double snap button Poles with red color code



(4) Male Poles



Plus: (6) Black Ball Bungees for Bundling Poles

(20) Thumbscrews for Joints

Hardware:

(2) Ell Joints



(2) 3-Way Joints




(2) StaBar Ells



(2) StaBar 3-Ways




1. Assemble legs as illustrated, sliding joints onto leg pole. Assemble 2 legs using 3-way joints and 2 legs with Ell joints. StaBar joints will slide all the way to the bottom of the pole to rest against the WheelSet. Top joints will click into place at the top end of the pole.

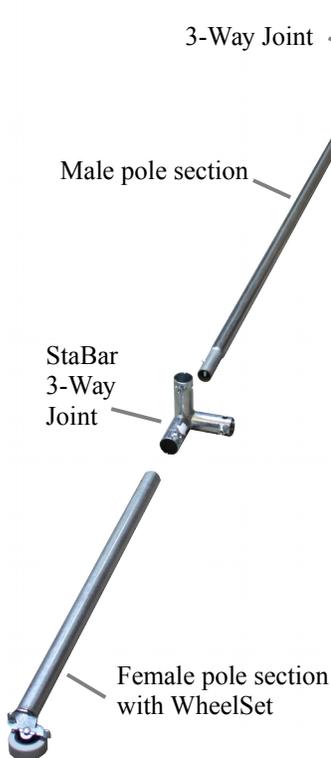

2. Assemble first frame flat on floor, using 1 leg with 3-way joints on the left and 1 leg with Ell joints on the right, joined by 2 of the red-coded poles. Orient left-side set of 3-way joints with open barrel facing up.

3. Insert 2 red-coded poles into open stubs of 3-way joints.

4. Add another leg with 3-Way joints, orienting it so that the open barrels point to the left.

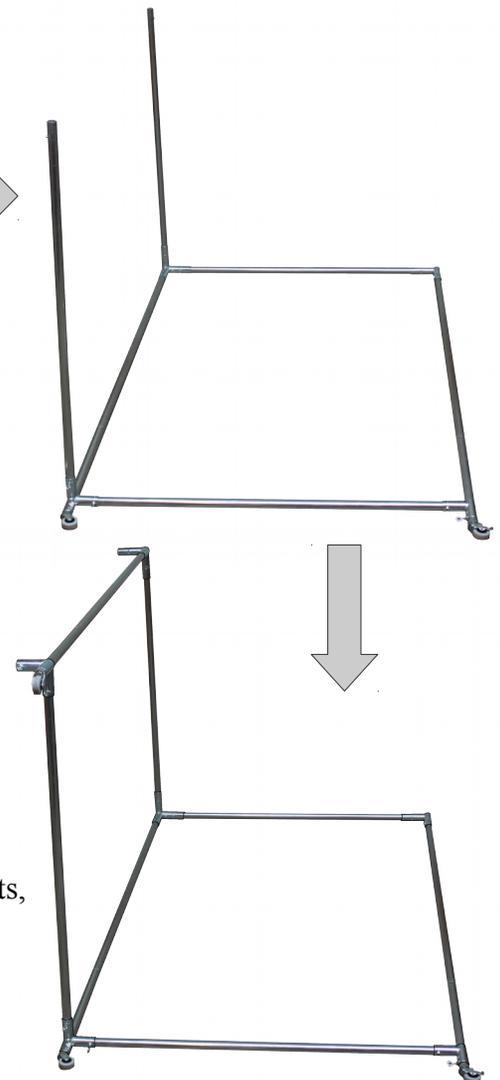



5. Insert last set of red-coded poles into 3-way joint and add final leg.

6. Now stand the entire unit up by tipping it towards you.



*Remember to finger-tighten all thumbscrews to achieve the most stability.



7. Attaching the mesh panels to the frame:

Be sure all thumbscrews are tightened before attaching panels.

1. Working from one side of frame, place aluminum hooks over upper horizontal poles and allow mesh panels to hang.

2. Snap buckle-straps around bottom StaBars and pull free end to tighten, pulling entire panel flat and smooth.

3. Finally, wrap Velcro straps around legs, pulling panels snug as you go.

Ready to hang artwork!