


Upper Stabilizer Bars

for the E-Z Up and other Pop-Up Canopies

Assembly Instructions

Parts:


- (2) EZ Long/Short StaBar 3 Way
- (1) EZ Long StaBar Ell
- (1) EZ StaBar Ell
- (4) Black Velcro straps (attached to joints)
- (3) Male pole sections – 61" long
- (3) Female pole sections – 53 1/4" long, coded BLUE
- (2) Ball Bungees for bundling poles
- (3) Thumbscrews

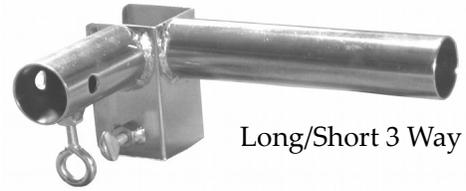

Long/Short 3 Way





Long StaBar Ell

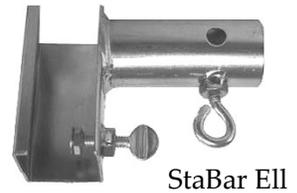


StaBar Ell

1. Set up your canopy according to manufacturer's instructions.
2. Install Long/Short 3 Ways on each rear leg by sliding open side of joint over the leg as high on the leg as possible. Secure in place with the attached thumbscrews.
3. Install Long Stabar Ell on the appropriate leg such that it faces the Short barrel of the 3 Way Joint. Install shorter StaBar Ell Joint facing the Long barrel of the other 3 Way.
4. Secure black Velcro strap around the framework of the roof to support the joint and prevent slipping.

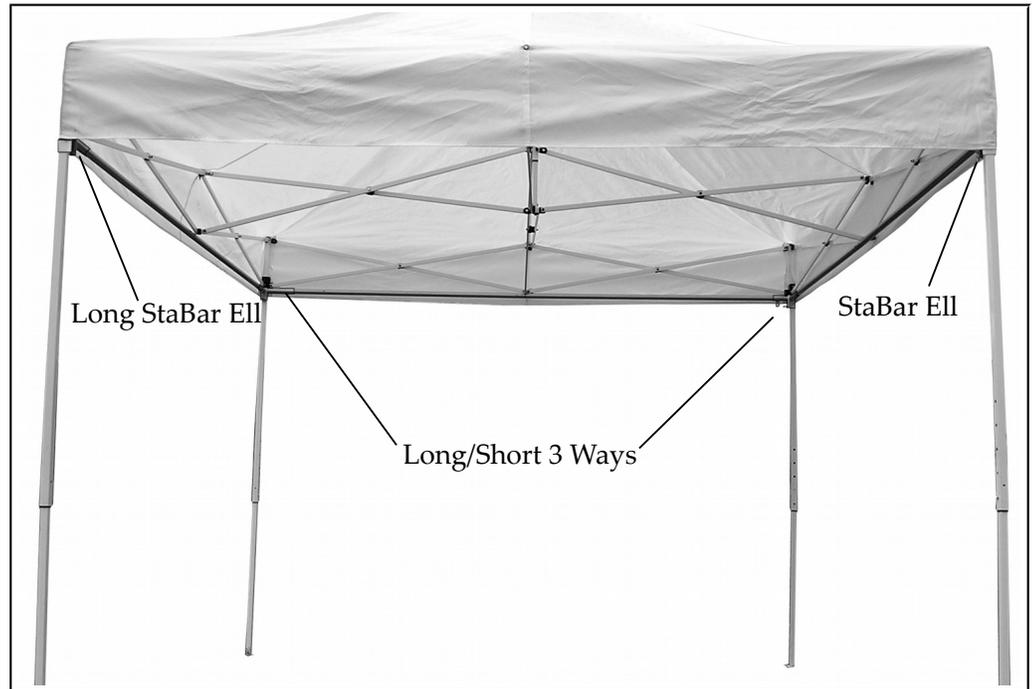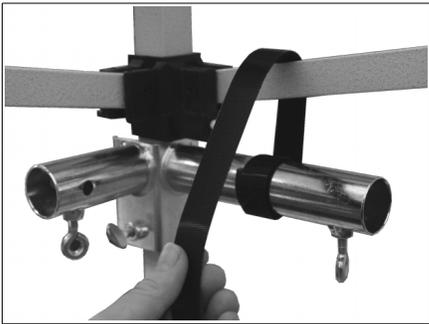

4. Assemble two StaBar poles by clicking male and female sections to each other.

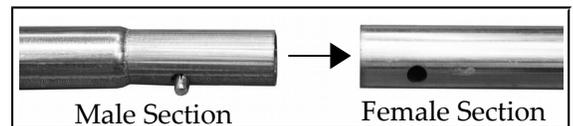

5. Insert the **Blue Coded** end of StaBar pole into a long barreled joint as far as possible. Moving to the other end of the pole, slide it back into the short barrel of the joint opposite it, clicking it into place with the snap button. Repeat with the other two poles.