

Door Frame for TrimLine Canopy

Instructions for Assembly


Parts:

- (1) Telescoping Leg - bottom section nested inside top section
- (1) 22 ½" Female pole
- (1) Foot
- (1) Door Ell Joint
- (2) StaBar Ell Joints



Assembly:

1. While assembling your TrimLine Canopy: Slide the Door Ell Joint onto the rear upper horizontal pole of the roof frame, positioning approximately 3 feet from corner.
2. Slide StaBar Joints onto leg bottoms: a StaBar 3-way in the rear corner farthest from the door, a StaBar Ell in the rear corner with the doorway, and a StaBar ell (and foot) on the Rear Door Leg.

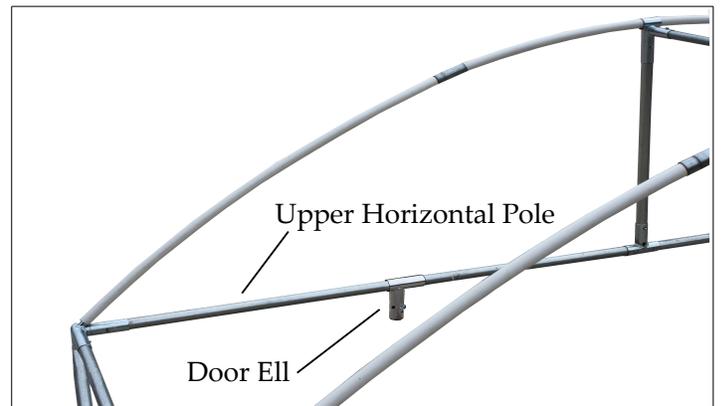

3. Finish assembling your canopy. Once you have all four corner legs attached, insert the fifth leg into the Door Ell Joint.
4. Assemble the StaBars, making one of them at 7ft long by using a standard no-color code male pole and the 22 ½" female pole. Starting with the back wall (7ft StaBar), attach the StaBars to their joints, adjusting the Rear Door Leg position as needed to meet the StaBar at a ninety degree angle.

