

StaBar Set for Light Dome Canopy

Assembly Instructions

Parts:

- (3) Male pole sections 61 in.
- (3) Female pole sections 56 in
- (2) StaBar Ell Joints
- (2) StaBar 3-Way Joints



3-Way Joint




Ell Joint

Assembly:

1. While setting up canopy: Slide StaBar Joints onto legs. Place 3-Way joints on the rear legs and Ells on the front legs, followed by Feet. If you will be using MeshPanels, install joints with the white arrow pointing down.

2. Assemble StaBar poles by clicking together male and female sections to form (3) 10' long poles.

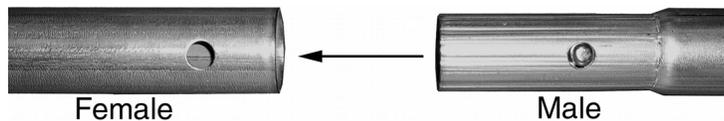

3. Insert rear StaBar first, clicking it into the StaBar Joints.
Repeat with the side StaBar poles.

4. Adjust placement of Joints on legs to level the StaBars, then finger-tighten the thumbscrews to secure.